

## Removing the ERS-7 visor


Open your AIBO's mouth and remove the two screws (circled in red) in the top of his mouth with a Philips head screw driver. The screws are very small, use the correct size screw driver to not damage them.



Next grasp the white portion of the head plastics to the left or right of the camera and gently pull it out, or towards you, to remove the gray bezel from the color camera. Then just slide it down onto the open mouth.



After the front portion is lowered push or pull the white plastic **straight** back off of the two clips (circled in red) holding it on. Be careful not to push the plastic down before pushing it back or the clips may break.

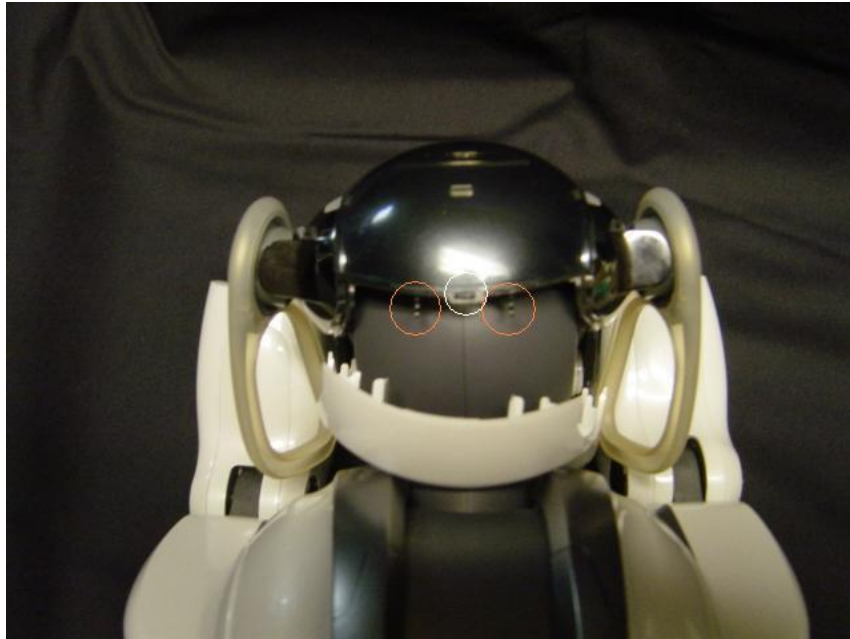

Between the two clips (circled in white) is where the back of the visor clips on. Gently pull the visor at the bottom of the clip back and then up off of the tab holding it on. Just push it up slightly because there are four more clips, two on each side holding the visor on.


Here you can see the two clips on the side of the visor after unhooking them. The screw driver is pointing to the tabs that held them on. Unhook them the same way you unhooked the clip on the back of the head.



At this point with three of the five clips unhooked you can just tilt the visor up and off of the other two clips on the other side of the head.

\*\*\*The ear is removed so it's not in the way but it's not necessary to remove it.

Here are the five clips that hold the visor on, four on the sides and one on the back.

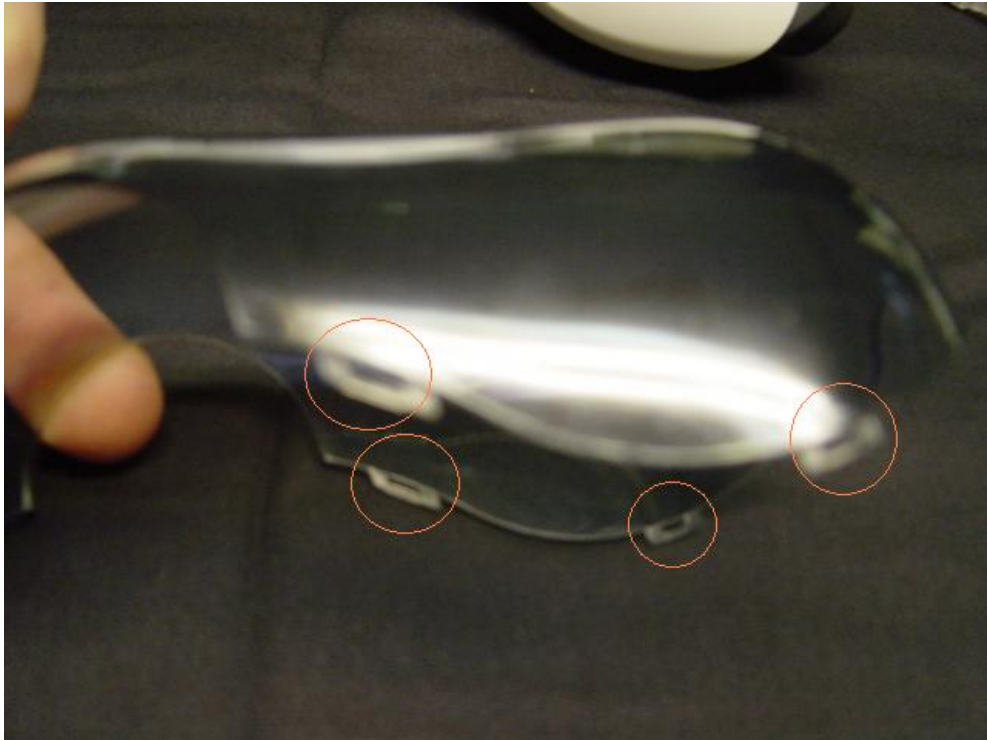

Now just clip the new visor in place and reverse the steps to put AIBO back together. Be sure to put the back portion of the white head plastic onto the clips first, as shown here. Gently pull the front portion out and over the camera to snap it into place.

